

Truss Accent

Laredo Sunset

Item #: 56616


**Ornamental
Wood Ties**



Replacement Parts

Kit Includes:

- 2 Truss Accent Plates (a)
- 4 Hex Cap Nuts (b)

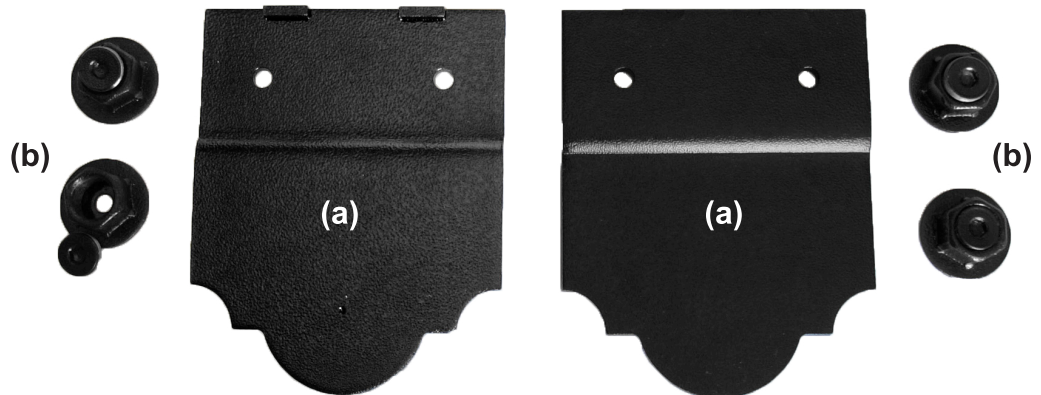

- Accent Plate for all OWT Connector Plates
- 3/16" thick Hot Dipped Galvanized & Power Coated Steel

Truss Accent

Item #: 56616

Laredo Sunset - Installation Guide

General Guidelines:

- Materials are heavy and bulky minimum of 2 people are required for most installations
- Brace and tie off large beams and posts until all connections are made
- Wear proper safety equipment
- Check with local authorities and home owners association before construction
- Check for underground and or hidden utilities that could be damaged
- Be sure to use the right tool for the job
- Plan ahead and have the required hardware, fasteners and tools close at hand before starting the installation

Steps:

1. Locate the tabs of the Truss Accent with the truss plate
2. Remove threaded covers from all Hex Cap Nuts
3. Insert Lag Bolts (sold separately) into Cap Nuts
4. OWT Lag Bolts require a 3/8" Hex Bit
5. Install the lag bolts
6. Replace Threaded Covers until flush with edge of the nut
7. HINT: Use tread lock on Threaded Covers in accessible areas

Note: Truss Accents are intended to be used in conjunction with OWT Truss Plates. Use in any other manner is not recommended.




Use and Care: This hardware may not be suitable for every situation or installation application. A design professional should be consulted to ensure the specific installation application meets local building code requirements.

If hardware becomes dirty clean with soap and water. Avoid abrasions to surface and touch up any scrapes with paint. Rinse with fresh water if hardware comes in contact with ice salt or salt water.


Corresponding Products

The Number of Truss Accent Kits Required Is Indicated By The Number Next To This Icon: ♦


90° Flush Inside ♦2
Item #: 56615

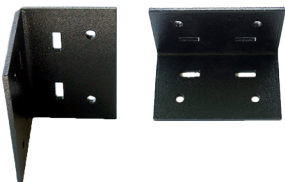


45° Flush Inside ♦2
Item #: 56611

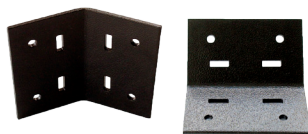


90° Flush Outside ♦2
Item #: 56614

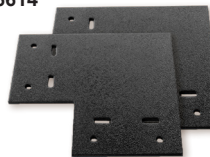

Butt Joint ♦2
Item #: 56613

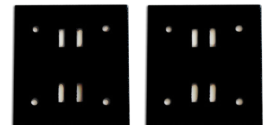

"T" Tie Plate ♦3
Item #: 56612

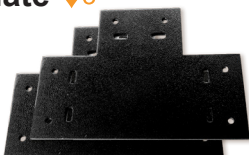

Truss Base Fan – 8:12 ♦2.5
Item #: 56619



Truss Base Fan – 10:12 ♦2.5
Item #: 56620

